

GUARANTEE

This copier is guaranteed for 90 days from the date of purchase subject to the following :-

Guarantee is void if the unit is opened, modified or damaged due to negligence.

Liability is limited to repair or replacement of the faulty components in the copier.

The manufacturers will not accept responsibility for damage caused to users equipment due to missuse of this copier.

FITTING INSTRUCTIONS

INTERFACE I

C16 / PLUS 4


First remove the plug from the end of the cassette lead leaving about 12ins of cable attached (fig 1).

Fig 1.




Then strip back the outer sleeve of the cable on both pieces about  $1\frac{1}{2}$  in (see fig 2) this will reveal the wire screen braid and seven wires.

Fig 2.

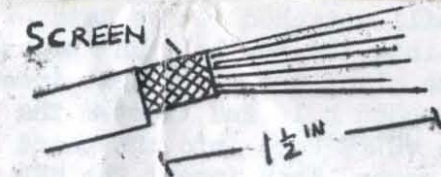

Trim the screen braid back (on both pieces) to the Outer cover as this is not required. Take care not to cut any of the seven wires, (see fig 3).

Fig 3.

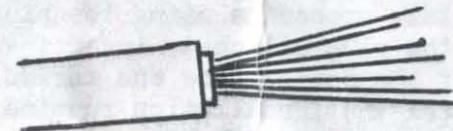

Carefully bare the end of each of the seven wires, about  $\frac{1}{4}$  in will be enough (again on both pieces).

Now take the copier and turn it upside down to reveal two rows of seven screws. (see fig 4).

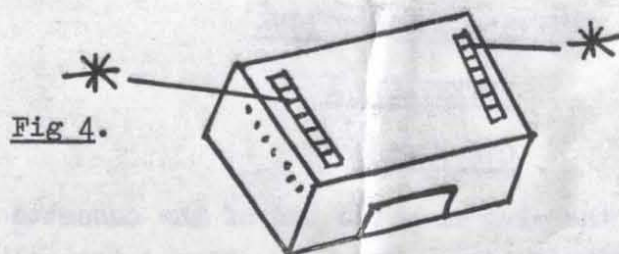


Fig 4.

At right angles to the seven screws you should see two rows of seven holes (one row at each end of the copier). See fig 5.

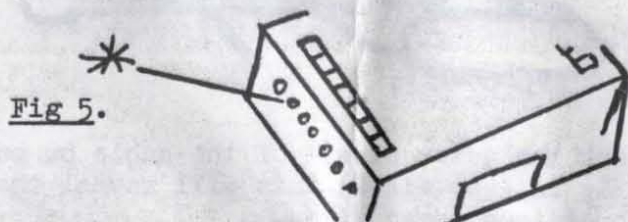


Fig 5.

Now, with the cut-out facing you, and using the lead that is still attached to the datasette :- insert the BLUE wire into the top hole and tighten the screw above the hole to clamp the wire. Next insert the BROWN wire into the second hole and tighten the second screw. Next insert the WHITE wire into the third hole and tighten the third screw. Then insert the RED wire into the fourth hole and tighten the fourth screw. Then insert the GREEN wire into the fifth hole and tighten the fifth screw. Now insert the BLACK wire into the sixth hole and tighten the sixth screw. Finally insert the YELLOW wire into the seventh hole and tighten the seventh screw.

Now repeat this procedure using the piece of lead that still has the plug attached, inserting the wires in the other end of the copier (the end marked COMPUTER).

This completes the installation routine. Now you simply follow INSTRUCTIONS FOR USE.

## INSTRUCTIONS FOR USE.

With the computer switched OFF, plug the lead from the copier into the cassette port at the rear of the computer. Plug a second cassette recorder (type C2N) into SAVE port on the Interface I.

Place a blank tape in second (save) cassette recorder.

Place the tape that is to be copied into the first (load) cassette recorder then turn computer ON.

Press RECORD & PLAY on 'SAVE' recorder, nothing will happen yet, now type LOAD on your computer and press RETURN. You will now get the message 'PRESS PLAY ON TAPE'.

Press PLAY on LOAD cassette recorder and both tapes will begin to run. Once loading is complete, your copy is also complete.

Do not try to copy from a copy as quality is not as high and you may suffer loading problems.

N.B. Two copies can be made at once if saving from the computer. Just put blank tapes in both cassettes, press RECORD & PLAY on SAVE recorder then use normal SAVE routine for LOAD recorder.

You can LOAD and SAVE as normal if only the LOAD tape is connected.

PLEASE NOTE. The copier is supplied to make back-up copies of your own software only.

-----0-----